ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK33053

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. The combined weight of your ceiling fan and light kit cannot exceed 35 pounds unless additional support is provided for the fan.

Fig.1

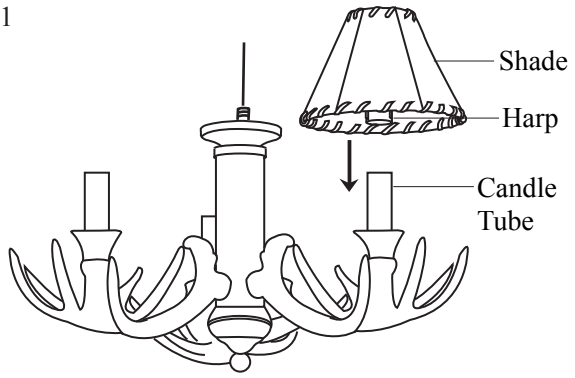

Fig.2

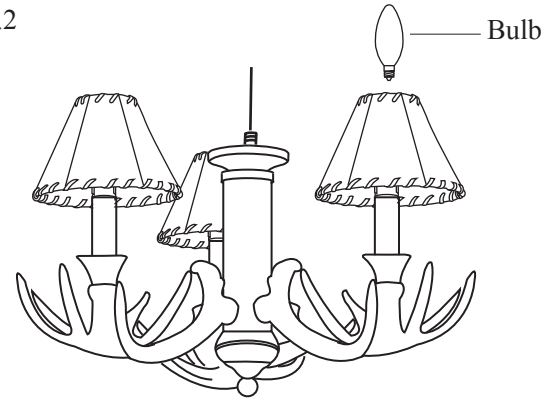

Fig.3

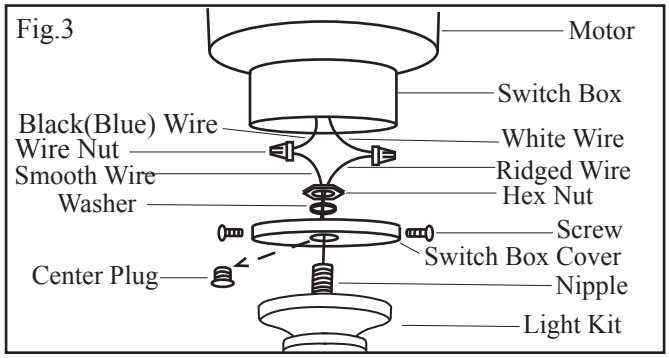

Fig.4

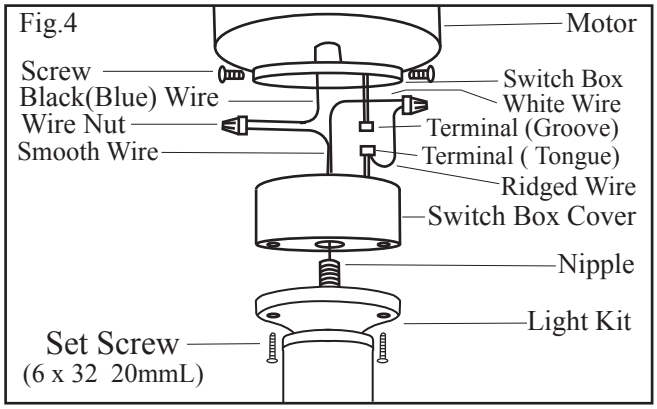

For Light Kit:

1. See Fig.1, Push the harp on the shade onto the candle tube.
2. See Fig.2, Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
3. Remove the switch box cover from the fan by loosing the three screws.
4. Unscrew and discard the center plug from the switch box cover.
5. For fan style that is shown in Fig.3: Please attach the nipple of the light kit to the hole of the switch box cover, then thread the wires through the washer and hex nut, and secure them tightly.
6. For fan style that is shown in Fig.4: Please attach the nipple of the light kit to the hole in the center of the switch box cover, then secure the light kit with the two set screws (6x32 20mmL) to switch box cover.
7. Cut the redundant wires if necessary. Pull out the wires from the switch box. Make wire connections using the wire nuts:
   ---The smooth (marked) wire from the fixture to the black (or blue) wire from the switch box.
   ---The ridged (unmarked) wire from the fixture to the white wire from the switch box.
   Carefully tuck the wires back into the switch box.
8. Attach the switch box cover back to the switch box using the three switch box screws.
9. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the pull chain.)

aireRyder™

060217

For Mini Chandelier:

Fig.5

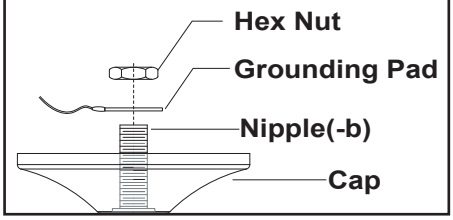

Fig.6

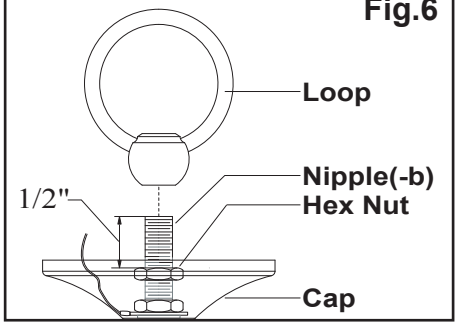

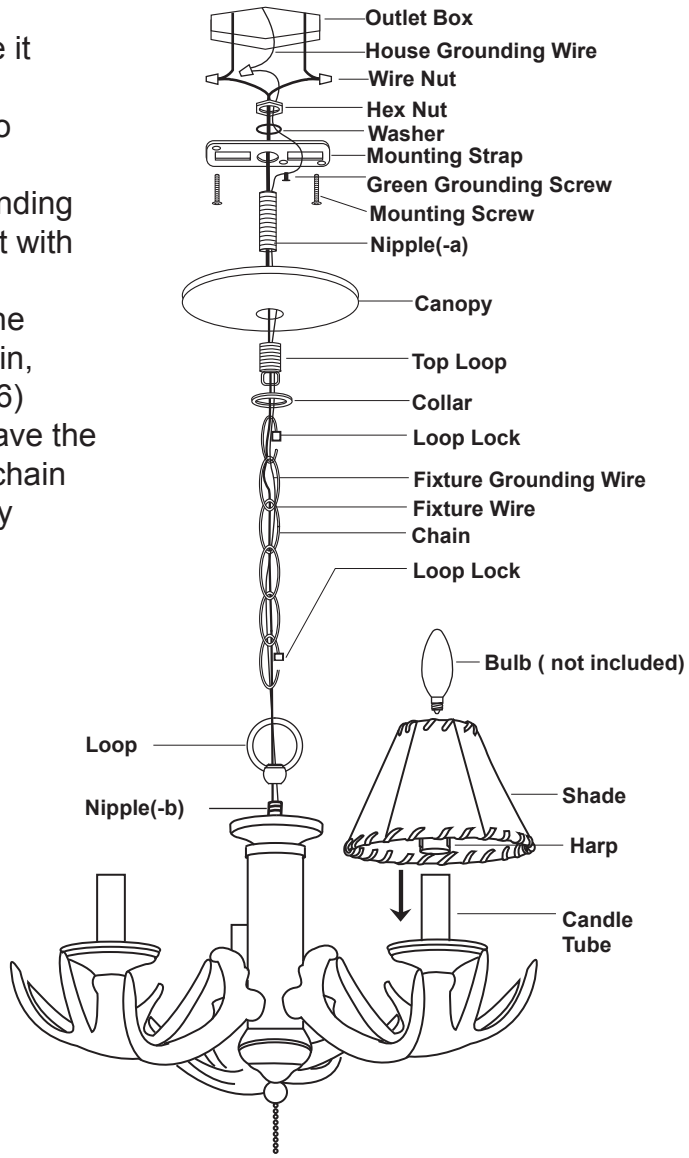

1. Attach the nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Unscrew the hex nut out of the nipple(-b). Set the grounding pad to the cap by inserting the nipple(-b), then secure it with a hex nut. (See Fig.5)
4. Thread the fixture wire through the other hex nut and the loop. Screw the hex nut onto the nipple(-b) about 1/2" in, then secure it with the loop to the nipple(-b). (See Fig.6)
5. Choose the length of the chain that you need, then weave the fixture wire and the fixture grounding wire through the chain links. Connect one end link of the chain with the loop by using the loop lock.
6. Secure the top loop to nipple(-b).
7. Thread the fixture wire and the fixture grounding wire through the collar, canopy, top loop, nipple(-a) and mounting strap.
8. Connect the link on the other end of the chain with the top loop by using the loop lock.
9. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:
   ---The smooth wire (marked) from the fixture to the black wire from the power source.
   ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
   ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
   Carefully tuck the wires back into the outlet box.
10. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
11. Push the harps on the shades onto the candle tubes.
12. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
13. Turn on the power at the main fuse or circuit breaker box.